

LOWRANCE®



Elite CHIRP

INSTRUCTIONS

Make sure that the unit is updated with the latest software version!

Older software versions may not follow the same instructions.

Go to the link below to update the Unit with the latest Software Version

<https://www.lowrance.com/downloads/>

BEFORE INSERTING THE E-CARD INTO THE UNIT

Power ON the Unit, and accept the warning.

Press the PAGES Button, and select Chart.

Insert the E-Card into the Unit

If Unit does not prompt with a "Loading Maps" message at the bottom.

Please check out our FAQ about Unit Not Reading E-Card.

Once Unit is finished "Loading Maps" (typically 5-15 seconds).

Press the MENU button TWICE to open the Settings Menu.

Press the ENTER button on Chart, then change the Chart Data to Lowrance.

Change the Imagery tab to Shaded Relief.

Please see our FAQ about how the Chart Detail effects the E-Card.

HAVING PROBLEMS LOADING THE MAP?

CALL: (985) 898 - 0025