SINRAD — CETTO MO SERIES INSTRUCTIONS

Make sure that the unit is updated with the latest software version!

Older software versions may not follow the same instructions.

Go to the link below to update the Unit with the latest Software Version https://www.simrad-yachting.com/help--support/Software-Upgrade/

Press the PAGES Button, and select Chart.

Insert the E-Card into the Unit

If Unit does not prompt with a Loading Wheel in the top left corner.

Please check out our FAQ about Unit Not Reading E-Card.

Once Unit is finished Loading Maps (typically 5-15 seconds)

Select the MENU button in the top right corner of the Unit Screen.

Select Chart Options, then change the Chart Source to Insight.

Under the Chart Options menu Select Imagery / Presentation.

Turn the Shaded Relief tab ON.

Please see our FAQ about how the Chart Detail effects the E-Card.

HAVING PROBLEMS LOADING THE MAP? CALL: (985) 898 - 0025