GARMIN_®




Does the map look blurry? Does the map take awhile to load?

CHANGING THE CHART SETTINGS ON THE UNIT WILL EFFECT THE RESOLUTION AND SPEED OF THE E-CARD.

On the Fishing Chart Screen, select the MENU button. Under the Fishing Chart Menu, select SETTINGS. The two settings you can change to effect the E-Card, is the Detail setting and the Chart Size setting.


** Helpful Hint: Turn the Inset Map OFF for a faster speed on the Unit. **

Detail Setting

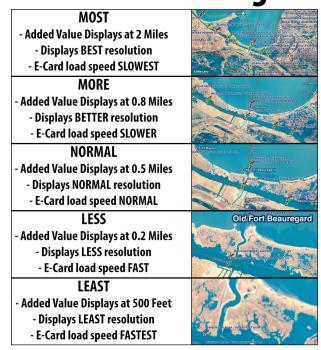

ALL SCREENSHOTS WERE TAKEN WITH SAME COVERAGE AREA

Chart Size Setting

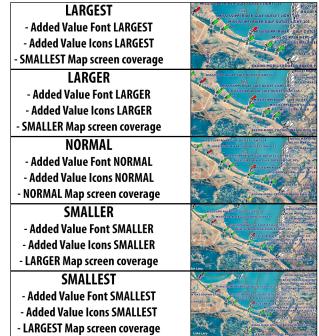

ALL SCREENSHOTS WERE TAKEN AT A 2 MILE RANGE WITH SAME COVERAGE

GARMIN_®



Detail Setting

MOST

- Added Value Displays at 2 Miles
 - Displays BEST resolution
 - E-Card load speed SLOWEST

MORE

- Added Value Displays at 0.8 Miles
 - Displays BETTER resolution
 - E-Card load speed SLOWER

NORMAL

- Added Value Displays at 0.5 Miles
 - Displays NORMAL resolution
 - E-Card load speed NORMAL

LESS

- Added Value Displays at 0.2 Miles
 - Displays LESS resolution
 - E-Card load speed FAST

LEAST

- Added Value Displays at 500 Feet
 - Displays LEAST resolution
 - E-Card load speed FASTEST



ALL SCREENSHOTS WERE TAKEN WITH SAME COVERAGE AREA

GARMIN_®



Chart Size Setting

LARGEST

- Added Value Font LARGEST
- Added Value Icons LARGEST
- SMALLEST Map screen coverage

LARGER

- Added Value Font LARGER
- Added Value Icons LARGER
- SMALLER Map screen coverage

NORMAL


- Added Value Font NORMAL
- Added Value Icons NORMAL
- NORMAL Map screen coverage

SMALLER

- Added Value Font SMALLER
- Added Value Icons SMALLER
- LARGER Map screen coverage

SMALLEST

- Added Value Font SMALLEST
- Added Value Icons SMALLEST
- LARGEST Map screen coverage

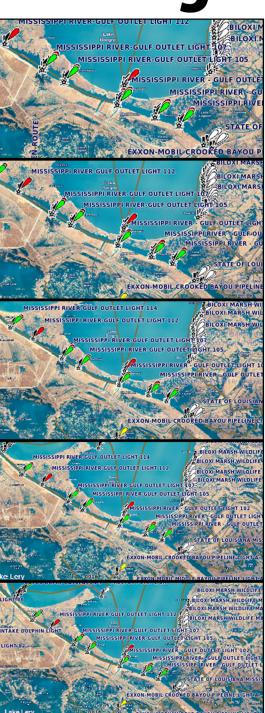

ALL SCREENSHOTS WERE TAKEN AT A 2 MILE RANGE WITH SAME COVERAGE