

# **SIMRAD**

## **GO SERIES**

# **e-card** STANDARD MAPPING

## **INSTRUCTIONS**

**Make sure that the unit is updated with the latest software version!**

**Older software versions may not follow the same instructions.**

**Go to the link below to update the Unit with the latest Software Version**

**<https://www.simrad-yachting.com/help--support/Software-Upgrade/>**

**BEFORE INSERTING THE E-CARD INTO THE UNIT**

**Power ON the Unit, and accept the warning.**

**Press the PAGES Button, and select Chart.**

**Insert the E-Card into the Unit**

**If Unit does not prompt with a Loading Wheel in the top left corner.**

**Please check out our FAQ about Unit Not Reading E-Card.**

**Once Unit is finished Loading Maps (typically 5-15 seconds)**

**Unit should prompt you with the following:**

**“Do you wish to change chart data selection to view the inserted charts?”**

**Select YES for the Insight / Navico Chart Source.**

***If the unit does not load this prompt continue with these settings:***

***Select the MENU button in the top right corner of the Unit Screen.***

***Select More Options, then change the Chart Source to Insight.***

**Once the Chart Source is set to Insight**

**Select the MENU button in the top right corner of the Unit Screen.**

**Select More Options, then Select Chart Options.**

**Turn the Shaded Relief tab ON (a check mark will appear on the tab).**

**Please see our FAQ about how the Chart Detail effects the E-Card.**

**Any Questions or Support, please call (985) 898 - 0025**