

GARMIN®



ECHOMAP™ Plus

INSTRUCTIONS

Make sure that the unit is updated with the latest software version!

Older software versions may not follow the same instructions.

ECHOMAP™ Plus Units must have Software Version 7.50 or newer.

Go to the link below to update the Unit with the latest Software Version

https://www8.garmin.com/support/download_details.jsp?id=4749

BEFORE INSERTING THE E-CARD INTO THE UNIT

 
Power ON the Unit, and accept the warning.

Press the HOME Button, and select Fishing Charts under Charts Menu.

Insert the E-Card into the Unit

If Unit does not prompt with a “Reading Maps” window.

Please check out our FAQ about Unit Not Reading E-Card.



Once to 100% of Reading Maps, press the BACK Button

From the Fishing Chart, press the MENU Button

In the Fishing Chart Menu, select Layers.

In the Layers Menu, select Chart

In the Chart Menu, select Satellite Photos.

Satellite Photos will turn green once selected.

Change the Land Only to OFF & Photo Map to 100%

Press the BACK Button, until Unit has returned to the Fishing Chart Screen.

Please see our FAQ about how the Chart Detail effects the E-Card.

Any Questions or Support, please call (985) 898 - 0025