

**GARMIN®** **e-card** STANDARD MAPPING

***My E-Card is not loading in the Unit.***

**CHECK THESE STEPS TO SEE WHY THE E-CARD  
MAY NOT BE LOADING OR READING IN THE UNIT.**

**Does your unit take a FULL Size SD Adapter?  
Make sure the Micro SD is inserted in the Adapter.**



**Is the SD inserted correctly in the Unit?**

**DO NOT FORCE THE CARD IN THE UNIT!**

**The card should easily be inserted in the Unit.**

**You should hear or feel a "click" to lock the card in the Unit.**

**Try taking the SD card out and reinserting the card in the Unit.**

**IF YOU CONTINUE TO HAVE PROBLEMS  
LOADING OR READING THE E-CARD IN THE UNIT.**

**CALL: (985) 898 - 0025**

**EMAIL: [info@standardmap.com](mailto:info@standardmap.com)**