

# GARMIN®



## ECHOMAP™ UHD

## INSTRUCTIONS

**Make sure that the unit is updated with the latest software version!**

**Older software versions may not follow the same instructions.**

**Go to the link below to update the Unit with the latest Software Version**

**[https://www8.garmin.com/support/download\\_details.jsp?id=4749](https://www8.garmin.com/support/download_details.jsp?id=4749)**

**BEFORE INSERTING THE E-CARD INTO THE UNIT**

 
**Power ON the Unit, and accept the warning.**

**Press the HOME Button, and select Fishing Charts under Charts Menu.**

**Insert the E-Card into the Unit**

**If Unit does not prompt with a “Reading Maps” window.**

**Please check out our FAQ about Unit Not Reading E-Card.**



**Once to 100% of Reading Maps, press the BACK Button**

**From the Fishing Chart, press the MENU Button**

**In the Fishing Chart Menu, select Layers.**

**In the Layers Menu, select Chart**

**In the Chart Menu, select Satellite Photos.**

**Satellite Photos will turn green once selected.**

**Change the Land Only to OFF & Photo Map to 100%**

**Press the BACK Button, until Unit has returned to the Fishing Chart Screen.**

**Please see our FAQ about how the Chart Detail effects the E-Card.**

**Any Questions or Support, please call (985) 898 - 0025**