



My E-Card is not loading in the Unit.

**CHECK THESE STEPS TO SEE WHY THE E-CARD
MAY NOT BE LOADING OR READING IN THE UNIT.**

**Does your unit take a FULL Size SD Adapter?
Make sure the Micro SD is inserted in the Adapter.**



Is the SD inserted correctly in the Unit?

DO NOT FORCE THE CARD IN THE UNIT!

The card should easily be inserted in the Unit.

You should hear or feel a "click" to lock the card in the Unit.

Try taking the SD card out and reinserting the card in the Unit.

**IF YOU CONTINUE TO HAVE PROBLEMS
LOADING OR READING THE E-CARD IN THE UNIT.**

CALL: (985) 898 - 0025

EMAIL: info@standardmap.com